




GPS 測位端末 取扱説明書

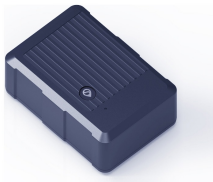

※ 本機は SIM 内蔵モデルです。SIM カードの挿入は不要です。

1. 製品の特長



Real-time tracking
リアルタイム追跡



4G network communication
4Gネットワーク通信



BDS+GPS dual satellite positioning
BDS+GPSデュアル衛星測位



OTA remote upgrade
OTAリモートアップグレード



IP67 waterproof design
IP67防水設計



Bluetooth configuration
Bluetooth設定



Strong magnetic suction
強力マグネット吸着



10000mAh rechargeable large battery
10000mAh大容量バッテリー



Remote listening
遠隔リスニング



Vibration alarm
振動アラーム



Multiple working modes
複数の動作モード



SOS alarm
SOSアラーム



Low battery alarm
低バッテリーアラーム



Temperature and humidity detection
温度・湿度検知



Geo-fence alarm
ジオフェンスアラーム


2. 設置手順

2.1 各部の名称（外観）

前面：SOS アラームボタン、T&H（温湿度センサー）、MIC（マイク）。

側面：USB-C 充電ポート、電源スイッチ（ON/OFF）、インジケータランプ。


背面：強力マグネット（金属面に直接固定できます）。

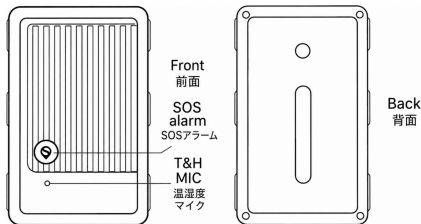

図：本体の前面・背面

2.2 電源を入れてオンラインにする

1. 本機は SIM 内蔵のため、SIM 挿入は不要です。
2. 電池が少ない／空の場合は、付属の USB-C ケーブルで充電してください。（高速充電がサポートしていません）
3. 電源スイッチ（ON/OFF）を ON にして起動します。
4. 屋外など空が見える場所で数分待つと、衛星と通信網に自動接続します。
5. 接続状態はインジケータランプ（下表）またはアプリで確認できます。

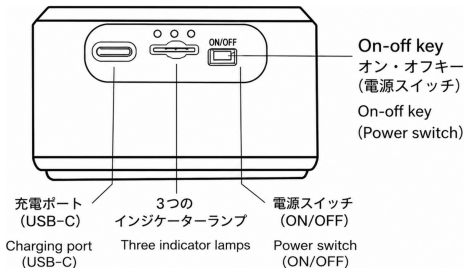

2.3 インジケータランプの状態

ランプの色	点灯状態	意味
オレンジ	点滅	ネットワーク初期化中
	ゆっくり点滅	ネットワーク受信良好
	点灯	ネットワーク／GPRS オンライン
	消灯	電波を受信できない（内蔵 SIM 未認識など）
ブルー	点滅	BD／GPS 測位中（衛星捕捉中）
	点灯	BD／GPS 測位成功
	消灯	GPS スリープ／停止中
レッド	点灯	充電中
	消灯	充電していない（満充電）

※ 電池が完全に空の場合、フル充電までの時間は約 6 時間です。充電中に本体がやや温くなるのは正常です。


2.4 取り付け方法

本機は「隠して取り付ける」ことを前提としています。

- 盗難・取り外しを防ぐため、できるだけ見えない場所に隠して設置してください。
- バックレーダーや他の車載通信機器など、電波を出す機器の近くを避けてください。
- 結束バンド、または幅広のスポンジ両面テープで固定できます。
- 強力マグネット磁石がついていますので、あらゆる金属に設置できます。
- 内蔵の GSM／GPS アンテナを上（空）に向け、上方向に金属で覆われない位置に設置してください。

3. 取り付け位置の例

車両への取り付け位置の例です。電波が通りやすく、見つかりにくい場所を選んでください。

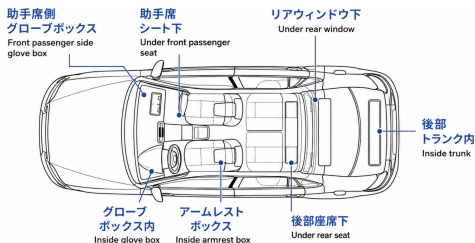

図：車両への取り付け位置の例
Figure: Examples of mounting positions in the vehicle

- 助手席グローブボックス
- 助手席シート下
- リアウィンドウ下
- グローブボックス内
- アームレストボックス
- 後部座席下
- 後部トランク内

4. 製品仕様

項目	仕様
動作電圧	3.7V
測位方式	GPS + BDS + LBS + WiFi
測位誤差	10m 未満
通信ネットワーク	2G / 4G
通信バンド	グローバル版: LTE-FDD B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/B19/B20/B25/B26/B28/B66 LTE-TDD B34/B38/B39/B40/B41 GSM 850/900/1800/1900 MHz
通信方式	TCP
動作温度範囲	-20℃ ～ +75℃
動作湿度	10%RH ～ 85%RH
本体サイズ	92mm × 63mm × 36mm
重量	317g
内蔵電池	10000mAh
保証期間	1 年

5. アプリのインストールと使い方

本機は WhatsGPS プラットフォームで位置情報を確認します。スマートフォンアプリまたはパソコンのブラウザから利用できます。



WhatsGPS のダウンロード方法



iPhone の方はこちら



App Store
からダウンロード



QR コードを読み取るか、
「App Store」で「WhatsGPS」と検索してください。



Android の方はこちら



Google Play
で手に入れよう



QR コードを読み取るか、
「Google Play」で「WhatsGPS」と検索してください。



PC の方はこちら

ブラウザからアクセスしてください



www.whatsgps.com



販売店から発行された情報でログインが必要

5.1 iPhone (iOS)

1. App Store を開きます。
2. 検索欄に「WhatsGPS」と入力して検索します。
3. 開発元が「Guangzhou SEEWORLD Technology」のアプリを選び、「入手」をタップしてインストールします。
4. アプリを開き、販売店から受け取った情報でログイン) します。

5.2 Android

1. Google Play ストアを開きます。
2. 検索欄に「WhatsGPS」と入力して検索します。
3. 開発元「Guangzhou SEEWORLD Technology」のアプリを選び、「インストール」をタップします。
4. アプリを開き、販売店から受け取った情報でログイン) します。

5.3 パソコン (PC / Mac)

パソコン用の専用ソフトはありません。Web ブラウザから管理画面にログインして利用します。


1. ブラウザ (Chrome / Edge / Safari など) で www.whatsgps.com を開きます。
2. アカウントとパスワードでログインします。
3. 地図上で現在地・走行履歴・ジオフェンスなどを確認できます。

(参考) どうしても PC でアプリ版を使いたい場合は、BlueStacks や NoxPlayer などの Android エミュレーターを利用する方法もあります。

ログイン情報やアプリの入手先が不明な場合は、購入元・販売店にお問い合わせください。



GPS Positioning Terminal User Manual

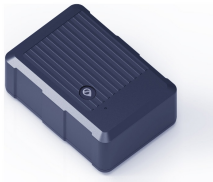

This model has a built-in SIM. No SIM card insertion is required.

1. Product Features



Real-time tracking
リアルタイム追跡



4G network communication
4Gネットワーク通信



BDS+GPS dual satellite positioning
BDS+GPSデュアル衛星測位



OTA remote upgrade
OTAリモートアップグレード



IP67 waterproof design
IP67防水設計



Bluetooth configuration
Bluetooth設定



Strong magnetic suction
強力マグネット吸着



10000mAh rechargeable large battery
10000mAh大容量バッテリー



Remote listening
遠隔リスニング



Vibration alarm
振動アラーム



Multiple working modes
複数の動作モード



SOS alarm
SOSアラーム



Low battery alarm
低バッテリーアラーム



Temperature and humidity detection
温度・湿度検知



Geo-fence alarm
ジオフェンスアラーム

2. Installation Instructions

2.1 Appearance

Front: SOS alarm button, T&H (temperature & humidity sensor), MIC (microphone).

Side: USB-C charging port, power switch (ON/OFF), indicator lights.

Back: strong magnet (can be attached directly to a metal surface).

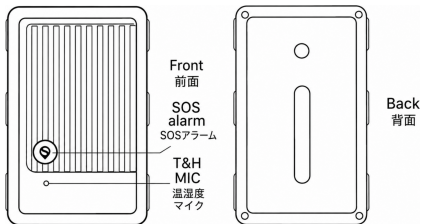


Figure: Front and back of the device

2.2 Power on and go online

1. This model has a built-in SIM, so SIM insertion is not needed. Check that the device has power.
2. If the battery is low or empty, charge it with the supplied USB-C cable.
3. Turn the power switch (ON/OFF) to ON to start the device.
4. Wait a few minutes in a spot with a clear view of the sky; it connects to satellites and the network automatically.
5. Check the connection status with the indicator lights (table below) or in the app.

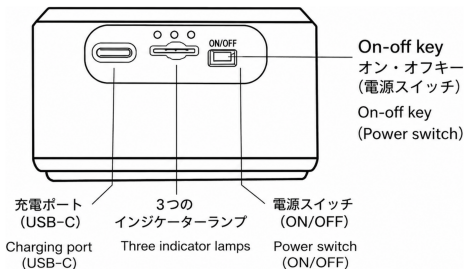


Figure: USB-C charging port, power switch (ON/OFF) and the three indicator lights

2.3 Indicator light status

LED type	LED status	Meaning
Orange	Flash	Network initialization
	Slow flash	Network signal is normal
	Always on	Network / GPRS online
	Not bright	No network signal received
Blue	Flash	BD / GPS signal search
	Always on	BD / GPS positioning success
	Not bright	GPS sleeping / not working
Red	Always on	Equipment charging
	Not bright	No charge

Note: If the battery is completely dead, full charge takes about 6 hours. Mild warmth during charging is normal.

2.4 Installation method

The device is intended for hidden installation.

- To avoid removal by thieves, hide the device as much as possible.
- Avoid placing it near transmitting sources such as reversing radar or other in-vehicle communication devices.
- It can be fixed with cable ties or wide sponge double-sided tape.
- Point the built-in GSM/GPS antenna up (toward the sky) with no metal shielding above it.


2.5 Function declaration

The Bluetooth configuration function works with the dedicated Bluetooth tool app. Get the download link from your dealer, or from the iOS / Android app store.

The remote listening function requires an SOS number to be set.

3. Installation locations

Examples of mounting positions in a vehicle. Choose a spot with good signal that is hard to find.

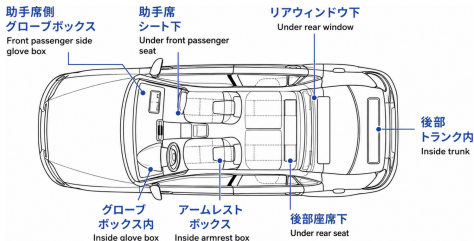

図：車両への取り付け位置の例
Figure: Examples of mounting positions in the vehicle

- Deputy glove box
- Under the passenger seat
- Under the rear windshield
- In the glove compartment
- Armrest box
- Under the rear seat
- Back in the trunk/box

4. Specifications

Item	Specification
Operating voltage	3.7V
Positioning method	GPS + BDS + LBS + WiFi
Positioning error	< 10 m
Communications network	2G / 4G
Communication band	Global version: LTE-FDD B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/B19/B20/B25/B26/B28/B66 LTE-TDD B34/B38/B39/B40/B41 GSM 850/900/1800/1900 MHz
Communication mode	TCP
Working temperature	-20°C to +75°C
Working humidity	10%RH to 85%RH
Size	92mm × 63mm × 36mm
Weight	317g
Built-in battery	10000mAh
Warranty period	1 year

5. Installing and using the app

This device uses the WhatsGPS platform (by Guangzhou SEEWORLD Technology). You can use it via the smartphone app or a PC web browser.



WhatsGPS How to Download



For iPhone Users



Scan the QR code or search for "WhatsGPS" on the App Store.



For Android Users



Scan the QR code or search for "WhatsGPS" on Google Play.



For PC Users

Access from your web browser.



www.whatsgps.com



Login is required with information issued by your dealer.

5.1 iPhone (iOS)

1. Open the App Store.
2. Search for "WhatsGPS".
3. Select the app by "Guangzhou SEEWORLD Technology" and tap Get to install.
4. Open the app and log in (or use the account info provided by your dealer).

5.2 Android

1. Open the Google Play Store.
2. Search for “WhatsGPS”.
3. Select the app by “Guangzhou SEEWORLD Technology” and tap Install.
4. Open the app and log in.

5.3 PC / Mac (web browser)

There is no dedicated PC software. Use the web platform through a browser.

1. Open www.whatsgps.com in a browser (Chrome, Edge, Safari, etc.).
2. Log in with your account and password.
3. View current location, track history, geo-fence and more on the map.

(Optional) To run the app version on a PC, you can use an Android emulator such as BlueStacks or NoxPlayer.

If you are unsure of your login details or where to download the app, contact your seller / dealer.